

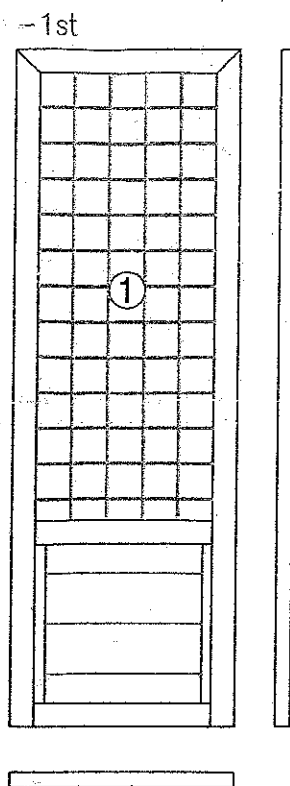



PLP W00435

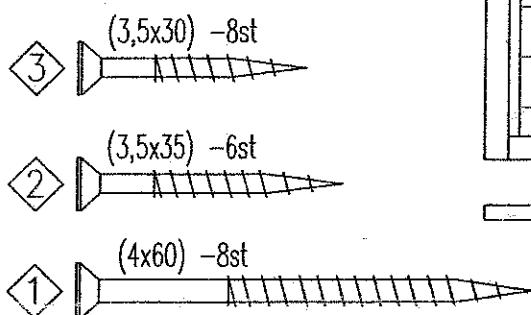


-2st

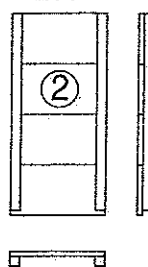


-1st

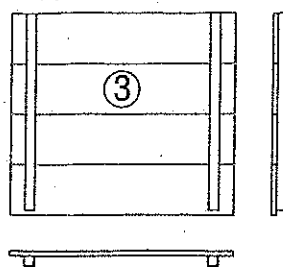

-1st

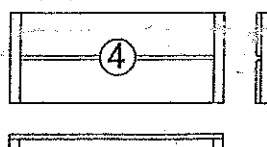


-1st

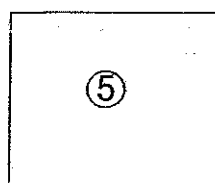


⑥ -2st




⑦ -1st




01

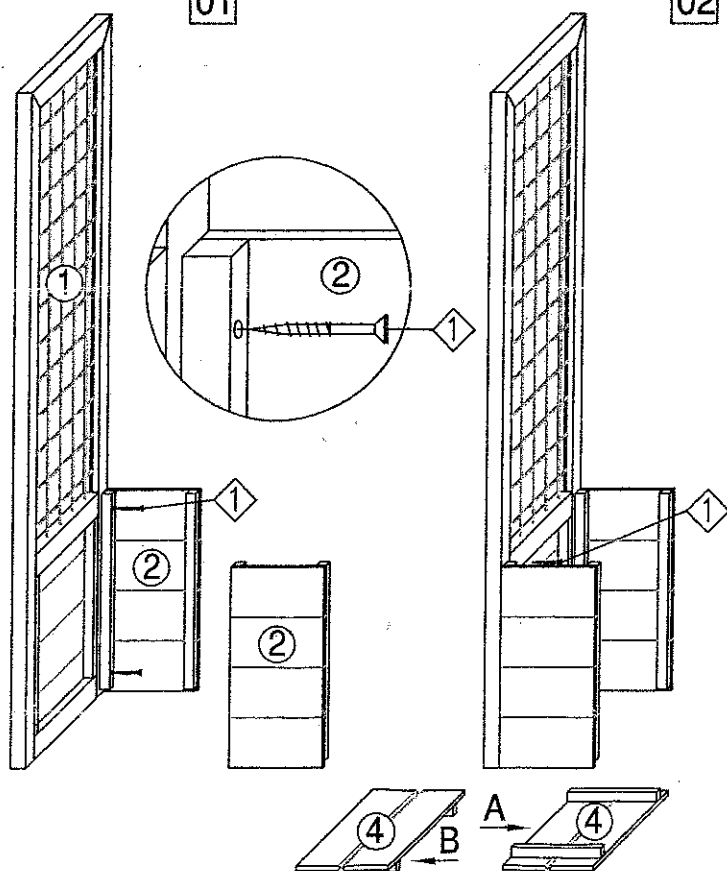

02





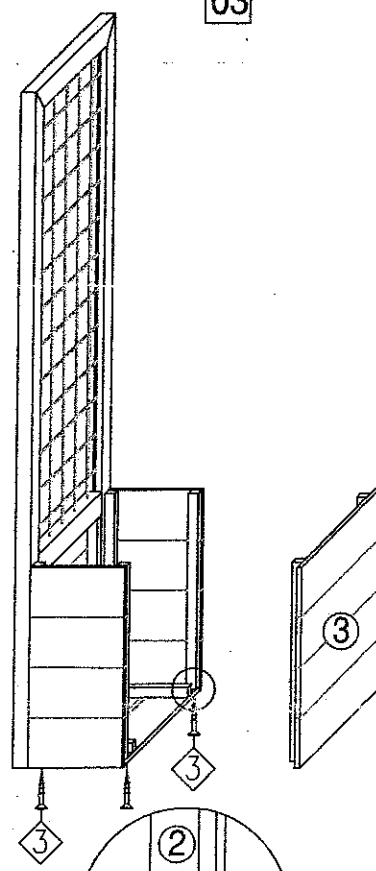


03




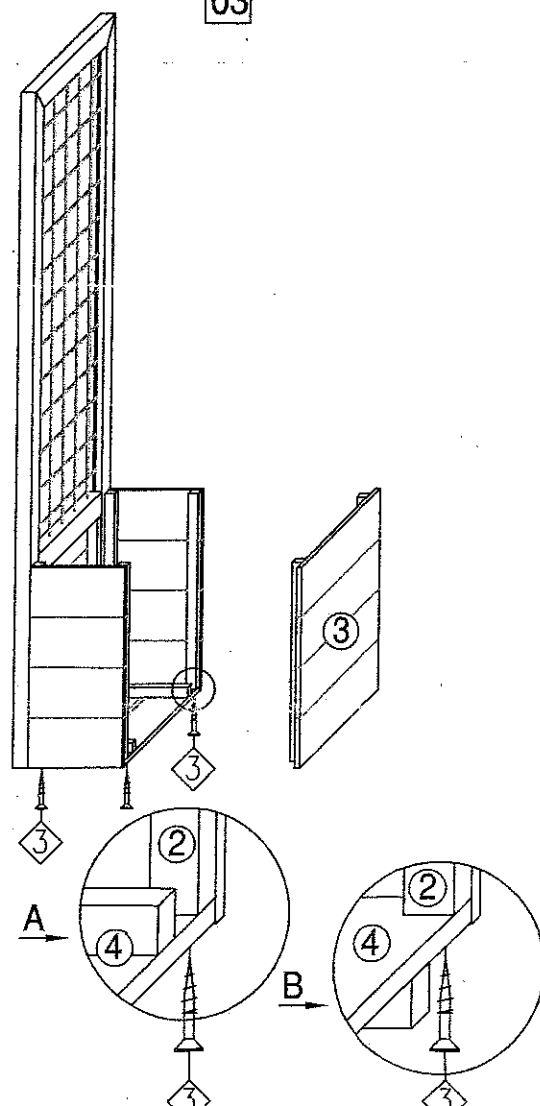


- (S) Vi rekommenderar förboring av skruvhålen!
 (NL) Voor alle schroeven adviseren wij de gaten voor te boren!
 (D) Vor dem Schraubeneindrehen soll man die Löcher boren!
 (UK) For all screws we advise to pre-bore the holes!
 (F) Pour toutes les vis nous vous recommandons de percer des trous



04

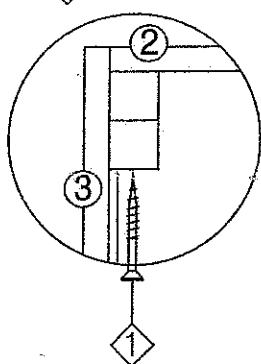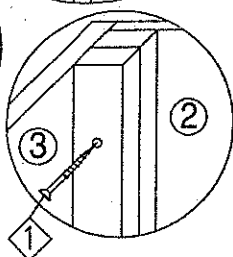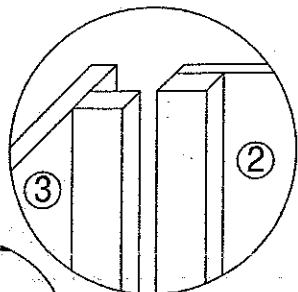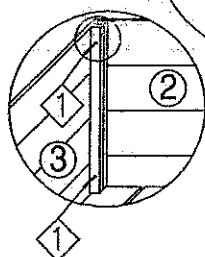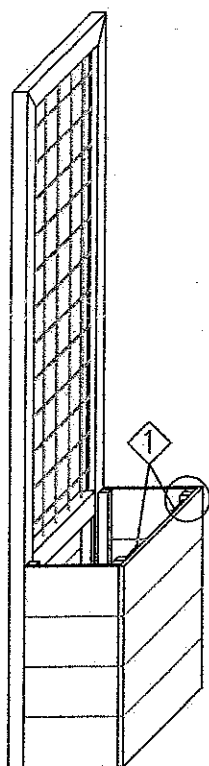



05

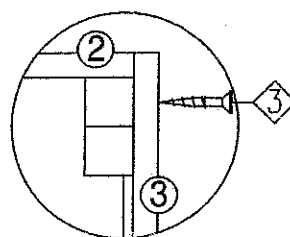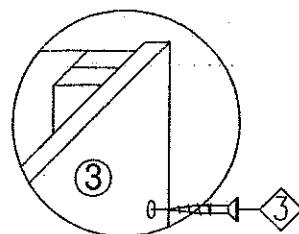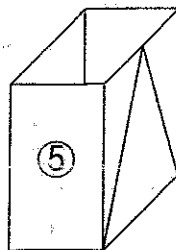

06

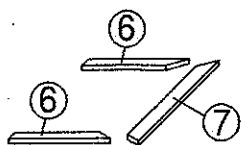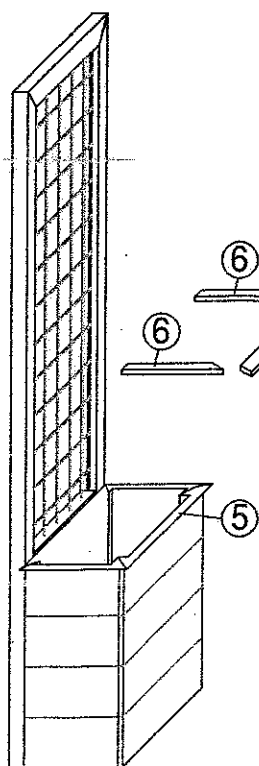

07

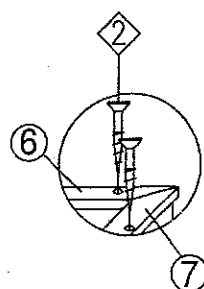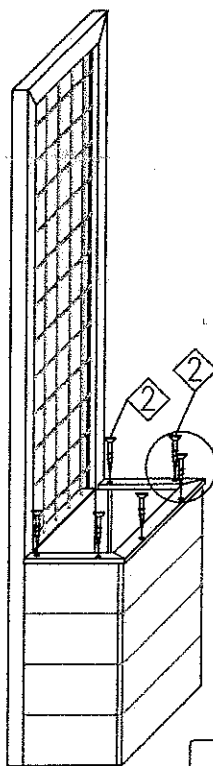

08

